



Setting and Adjusting the Auto Purge Function on a Separator

TIMER SETTINGS

THE PUROFLUX AUTO PURGE TIMER IS EQUIPPED WITH CONTROL DIALS TO PROGRAM THE PURGING CYCLES TO MATCH YOUR SPECIFIC NEEDS.

**** POWER SHOULD BE TURNED OFF BEFORE CHANGING SETTINGS ****

OPERATION MODE


MIDDLE DIAL (MODE) : TIMER OPERATION MODE
FACTORY SETTING : "D"

CYCLE TIME

LOWER DIAL (T1) : FREQUENCY OF PURGING
RANGE (1H) : 36 MINUTES TO 30 HOURS
FACTORY SETTING : EVERY 6 HOURS

PURGING TIME


UPPER DIAL (T2) : DURATION OF PURGING
RANGE (1S) : 0.6 TO 30 SECONDS
FACTORY SETTING : 30 SECONDS

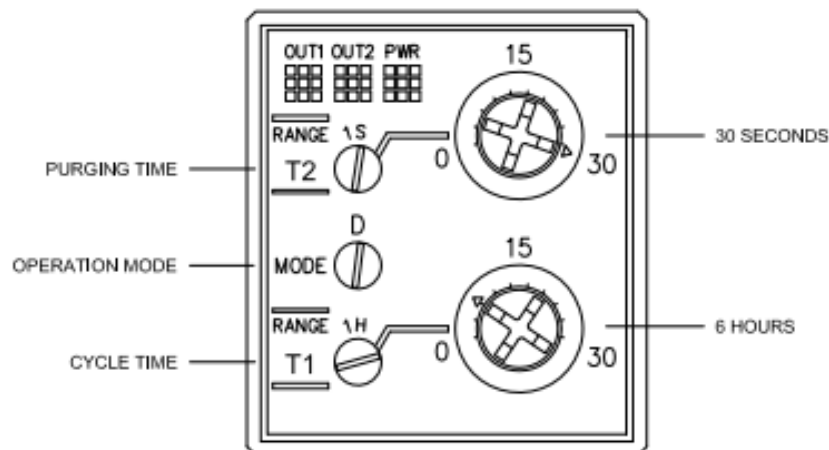

2121 UNION PLACE • SIMI VALLEY, CA 93065
PHONE: (805) 579-0216 • FAX: (805) 579-6005
WWW.PUROFLUX.COM • SALES@PUROFLUX.COM



PUROFLUX
CORPORATION

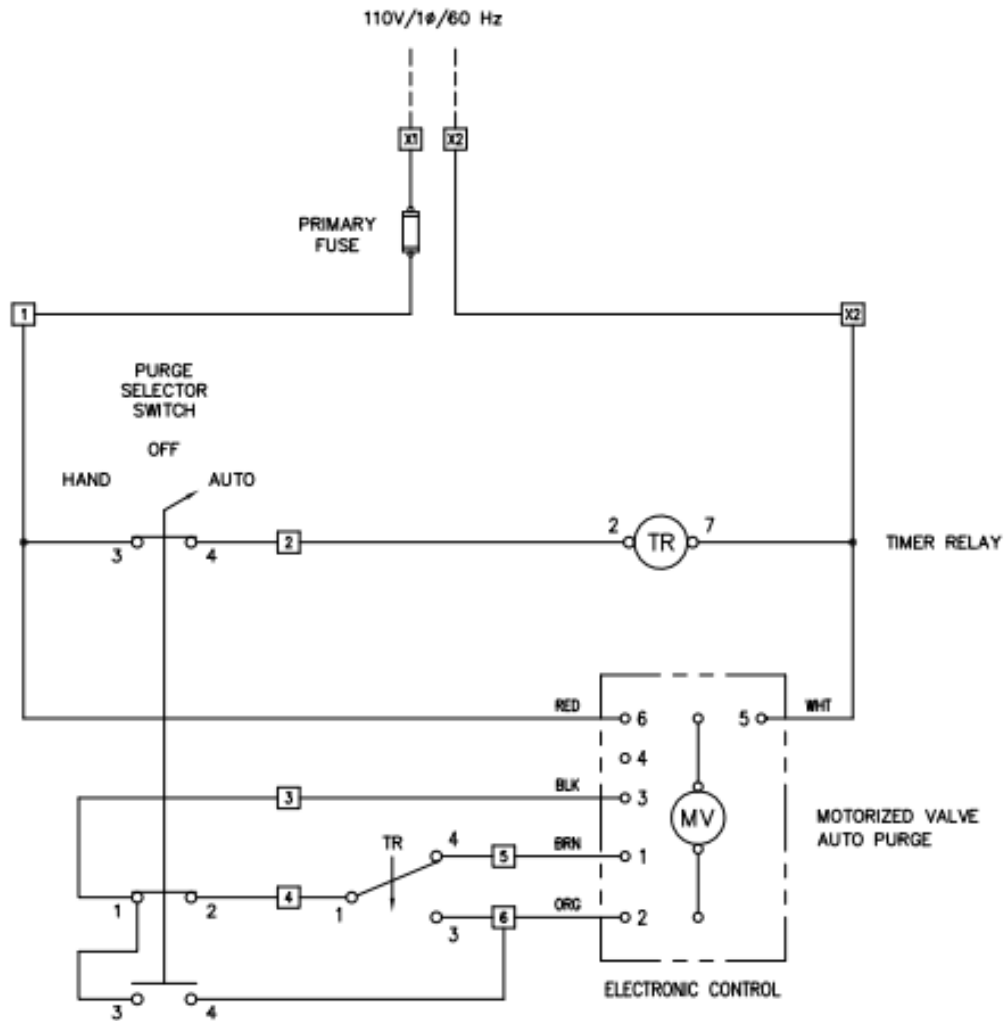

PANEL WIRING

2121 UNION PLACE • SIMI VALLEY, CA 93065
PHONE: (805) 579-0216 • FAX: (805) 579-6005
WWW.PUROFLUX.COM • SALES@PUROFLUX.COM